

DMX FLEXTRIM™ APPLIED TO DMX AG™ FOUNDATION WRAP

NOTES:


1. DRAWINGS THAT HAVE N.T.S IN BRACKETS ARE NOT TO SCALE.
2. N.T.S DRAWINGS ARE DESIGNED TO HIGHLIGHT THE LOCATION OF DMX AG™.
3. DETAILS ARE INTENDED TO BE A RECOMMENDED GUIDE FOR INSTALLATIONS.
4. ANY CONSTRUCTION / WORKING DRAWINGS PROVIDED FOR THE PROJECT SHOULD BE FOLLOWED AS DESIGNED.



BETTER SCIENCE, BETTER PRODUCT


DMX FLEXTRIM™ APPLIED TO AREAS WHERE FLAT TAB HAS BEEN CUT AWAY. ADHERED TO FOUNDATION WALL WITH CONCRETE NAILS EVERY 6" - 8" (150mm - 200mm) AND BEAD OF SEALANT (AS REQ'D)

DMX WASHERS™ PROPERLY LOCATED TO FORM A 'W' PATTERN ADHERED WITH CONCRETE NAILS (SEE A101)

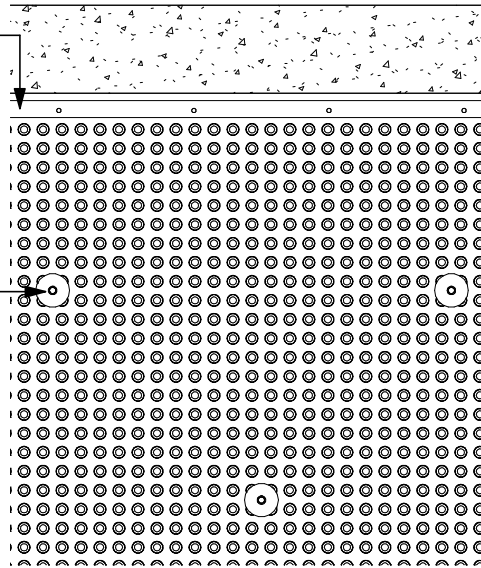

CONCRETE FOUNDATION

DMX FLEXTRIM™ APPLIED TO DMX AG™
(FRONT VIEW - 1:10)

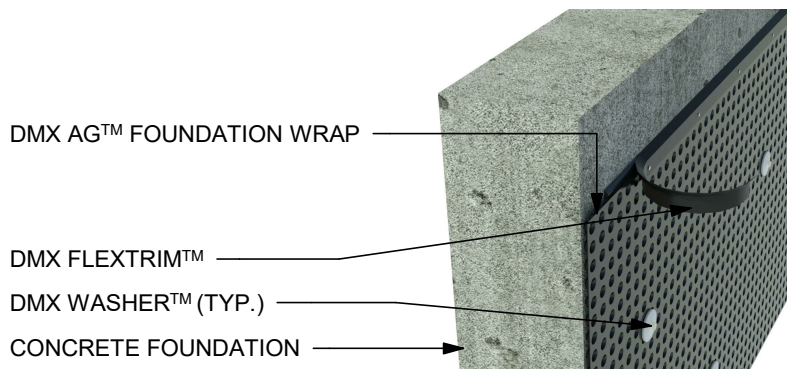

DMX AG™ FOUNDATION WRAP

DMX FLEXTRIM™

DMX WASHER™ (TYP.)

CONCRETE FOUNDATION

DMX FLEXTRIM™ AND DMX WASHERS™
APPLIED TO DMX AG™



BETTER SCIENCE
BETTER PRODUCT

DMX Plastics Limited
165 Orenda Rd.
Brampton, On
L6W 1W3
905.458.8998

www.dmxmembranes.com

DMX FLEXTRIM APPLIED TO DMX AG
FOUNDATION WRAP

Drawing number AG.02

Date 09-01-2021

Drawn by BT

A102

Scale As indicated